



Anti-slip disposable
absorbent floor mat
- product guide

www.enaris.co.uk



enarismedical

Anti-slip disposable absorbent floor mats

OUR anti-slip absorbent floor mats are now available via the NHS Supply Chain.

The disposable mats were developed with the safety of staff and the comfort of the user in mind. They help keep floors **clean, dry and slip-free** in a number of areas within the hospital, including **operating theatres, scrub areas** and **maternity**.

The mat **is designed to be stood on**, without any risk of the mat moving, in areas where fluid is an issue.


Mats are available in five options: **standard (small and large)**, **superior** and on a **30.5 metre roll (standard and superior)**.

If you require **FREE** samples of the product for trials in your trust, please contact our marketing manager, Mark Lingard, on **01952 230055** or email **mark.lingard@enaris.co.uk**

"We have used the absorbent floor mats in our operating theatres; they have been very useful as we were able to put them down on an already wet surface and they didn't slip at all.

"They were very absorbent and were great for our obstetric theatres. We have been really happy with this product, finding them a safe and easy product to use," - Sharon Fletcher, clinical lead nurse for theatres, fertility and proceduces at Birmingham Women's Hospital

STANDARD

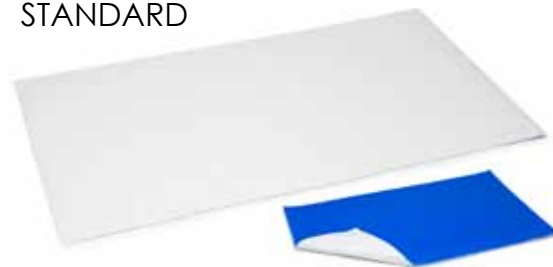

AM2 - 58cm x 100cm mats with an absorbency of 3 litres per sq m. Also 58cm x 50cm, and in roll form

SUPERIOR



AM4 - 84cm x 102cm mats with an absorbency of 5 litres per sq m

SUPERIOR - ROLL



AMR4 - 84cm x 30.5cm rolls with an absorbency of 5 litres per sq m. Rolls also available in standard 3L.



enarismedical

Anti-slip disposable absorbent floor mats

- Can be used on both dry floors and already-wet floors
- Unique one-way valve allows water to be taken up and held
- Reduces the risk of slipping
- Quickly absorbs fluids
- Conforms to uneven flooring
- No super-absorbent powders so mat doesn't expand or swell
- Simple disposal by incineration
- Standard (3-litre, blue) or superior (5-litre, orange) absorbency available
- Cushioned element to the mat provides an anti-fatigue element
- Available from NHS Supply Chain



OPERATING THEATRES

SCRUBS AREAS

MATERNITY

UROLOGY

... IN SHORT, ANYWHERE THAT FLUID IS A PROBLEM



enarismedical

Anti-slip disposable absorbent floor mats

WHO *would use this product?*

Surgeons and other operating department practitioners, scrubs areas, midwives, urology departments, and many other hospital departments.

WHAT *are the benefits?*

A safe, slip-free environment for people to stand while performing a job.

WHERE *would the product be used?*

Anywhere that fluid on the floor is an on-going problem and a safety hazard while working. This is not an emergency spill sheet - it's a mat that's designed to be stood on by the user.

WHEN *would the product be used?*

The mats can be placed around an operating table, for example, and the surgeon and/or other medical staff can stand safely on the mat. With absorption of up to 5 litres per square metre, it can sometimes last an entire procedure.

WHY *would the product be used?*

The mats are very cost-effective, especially when compared with similar products on the market. However, not only are our mats lower cost, they have additional features. A unique valve allows water to be taken up from underneath the mat and held - but this valve is one way; effectively the mat draws water up from below. This means the mat can be placed safely on a floor that's already wet without risking slipping.



VWL313



STANDARD - MAT

Anti-slip disposable absorbent floor mat

- Size 58cm x100cm
- Absorbency 3-litres per square metre
- Box count 60
- Product code VWL313
- Minimum order quantity 2 boxes (1 outer box containing 120 units)

Sizes: Alternative sizes are a 3-litre 58cm x 100cm mat, a 3-litre 58cm x 30.5m roll, a 5-litre 84cm x 30.5m roll, and a 5-litre 84cm x 102 cm mat



enarismedical

VWL314



STANDARD - MAT

Anti-slip disposable absorbent floor mat

- Size 58cm x 50cm
- Absorbency 3-litres per square metre
- Box count 100
- Product code VWL314
- Minimum order quantity 2 boxes (1 outer box containing 200 units)

Sizes: Alternative sizes are a 3-litre 58cm x 100cm mat, a 3-litre 58cm x 30.5m roll, a 5-litre 84cm x 30.5m roll, and a 5-litre 84cm x 102 cm mat



enarismedical

VWL315



STANDARD - ROLL

Anti-slip disposable absorbent floor mat

- Size 58cm x 30.5m (roll)
- Absorbency 3-litres per square metre
- Box count 1
- Product code VWL315
- Minimum order quantity 1 roll

Sizes: Alternative sizes are a 3-litre 58cm x 50cm mat, a 3-litre 58cm x 100cm mat, a 5-litre 84cm x 30.5m roll, and a 5-litre 84cm x 102 cm mat



VWL312



SUPERIOR - MAT

Anti-slip disposable absorbent floor mat

- Size 84cm x102cm
- Absorbency 5-litres per square metre
- Box count 25
- Product code VWL312
- Minimum order quantity 2 boxes (1 outer box containing 50 units)

Sizes: Alternative sizes are a 3-litre 58cm x 50cm mat, a 3-litre 58cm x 100cm mat, a 3-litre 58cm x 30.5m roll, and a 5-litre 84cm x 30.5m-long roll

**MOST
POPULAR
SIZE!**



enarismedical

VWL311



SUPERIOR - ROLL

Anti-slip disposable absorbent floor mat

- Size 84cm x 30.5m (roll)
- Absorbency 5-litres per square metre
- Box count 1
- Product code VWL311
- Minimum order quantity 1 roll

Sizes: Alternative sizes are a 3-litre 58cm x 50cm mat, a 3-litre 58cm x 100cm mat, a 3-litre 58cm x 30.5m roll, and a 5-litre 84cm x 102 cm mat



enarismedical

ANTI-SLIP FLOOR MATS



User instructions

The anti-slip disposable absorbent floor mat is always used with the orange (5-litre mat) or blue (3-litre mat) side in contact with the floor, and the white side facing up... so the user is standing with their feet on the white side.

Once wet, capillary action on the orange/blue side of the mat will hold the mat in place, preventing movement and helping to prevent slips.

This capillary action also means the mat can be thrown down on to an already wet floor - it will start to absorb and 'suck the water up'.

Once used, the mat can be safely incinerated.

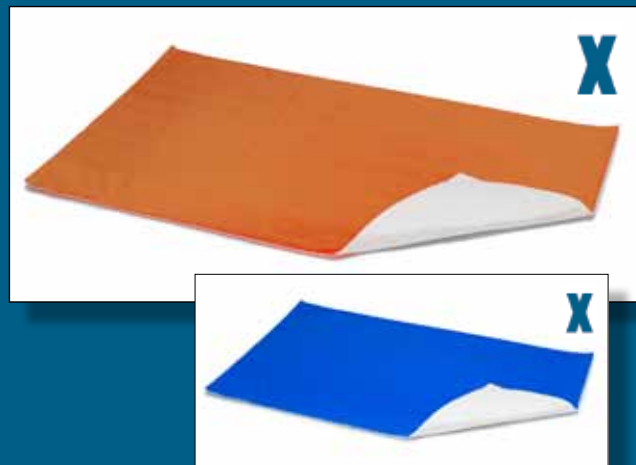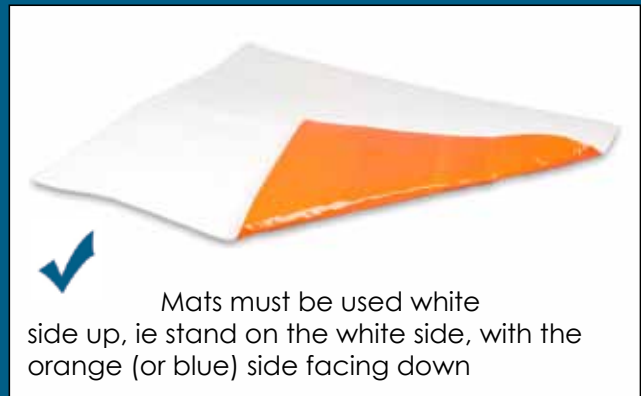

WE ALSO SELL...



Spillage pads for quick and easy absorbency in a variety of medical and healthcare situations



enarismedical

I'm interested... what now?

ORDER VIA NHS SUPPLY CHAIN

OR GET IN TOUCH....

We understand you will probably want to see samples, might want to trial the product first, and then might need to present it to colleagues who might want a say....

We're here to help. If you'd like us to visit your trust and present the product and its benefits to your teams, just ask, and we'll help do some of the hardwork for you

Our contact details are

Anish Miah, Sales Executive

anish.miah@enaris.co.uk

07487 729792

Mark Lingard, Marketing Manager

mark.lingard@enaris.co.uk

01952 230055




WE ALSO SELL...



Absorbent tourniquet limb drapes for upper and lower limb proceduces.

www.enaris.co.uk

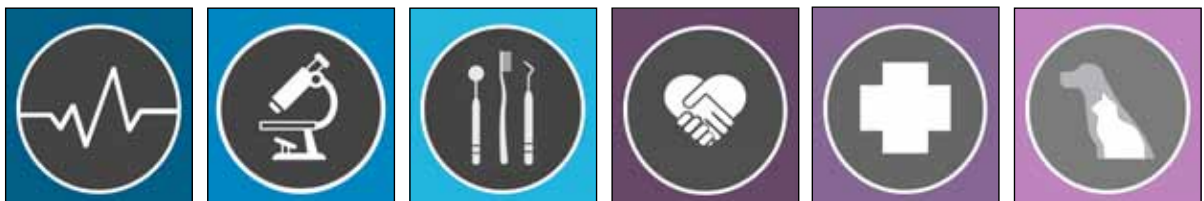

www.enaris.co.uk